



Guiding wheel installation instruction

1

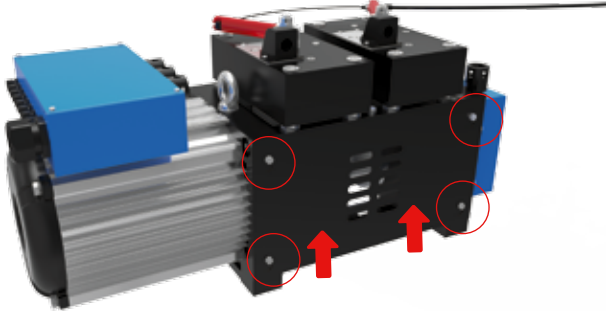


① Loosen the screw, detach plate from each side.

2

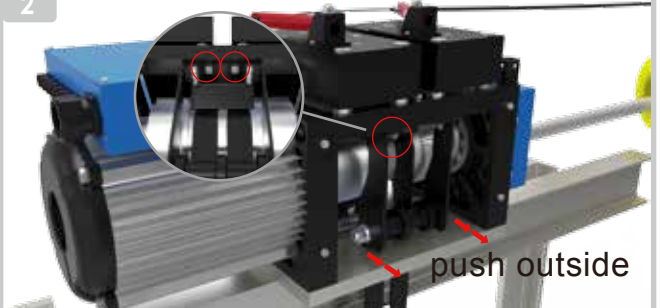


② Loosen the screw, push outward the guide wheel to the end, if not sufficient space left, no need to do like that.

3

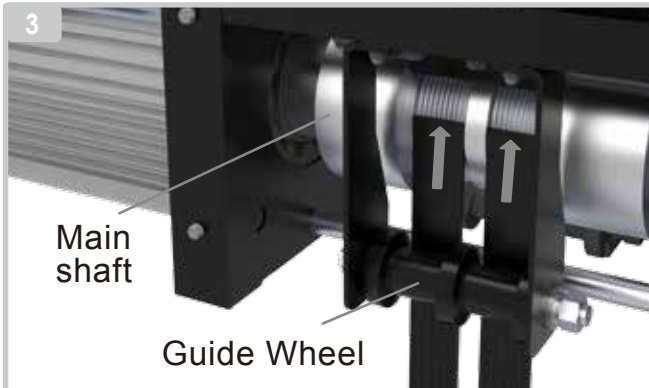

③ Let the belt cross through. main shaft.


4

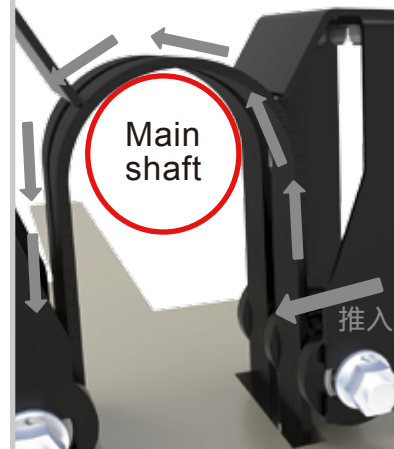




④ After install the belt, push inward to the end.

5

⑤ Tight the screw, check and ensure the clearance between belt and guide wheel, also the plate with 1.5-2mm distance.

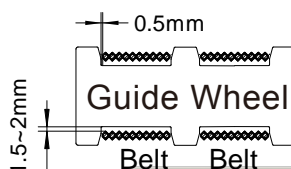

⑥ Install protective plate.

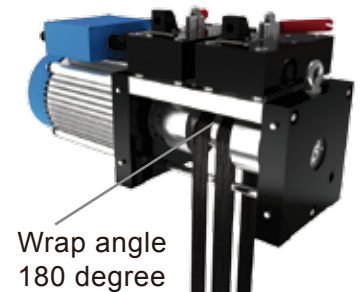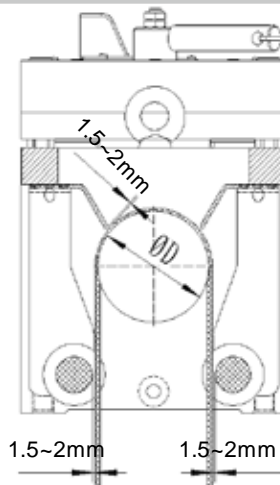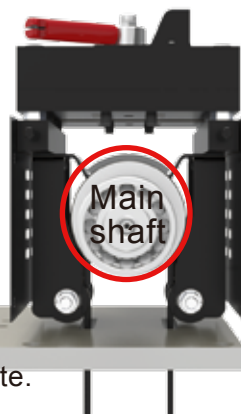

Note: this guide wheel and anti jump bar only apply for the wrap angle within 180 degree!