


Break release and self lock nut clearance adjustment instruction



Step 1:

Use 17 mm Spanner to clockwise tight the self lock nut(M10). Now the clearance between iron core and armature eliminated, can check by feeler gauge (now the break in release position)

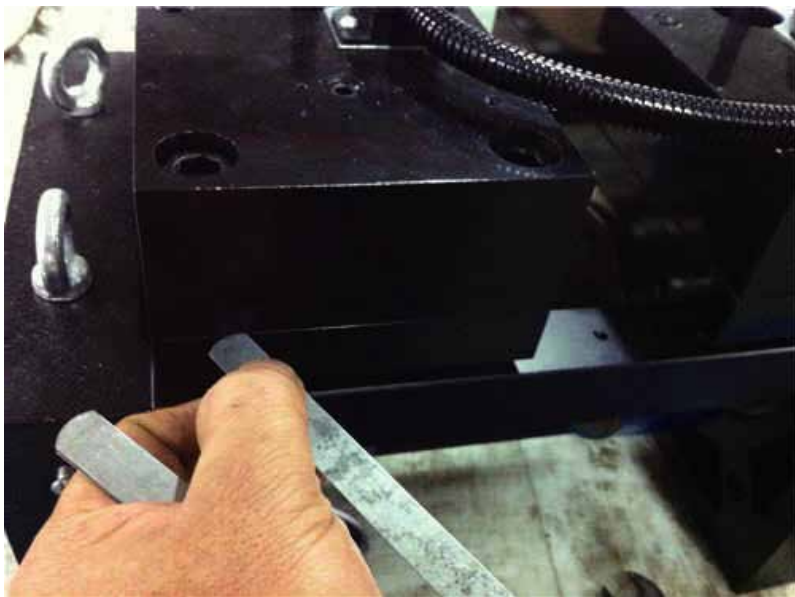

Note:

Adjustment for 2 break in the same time is strictly forbidden, otherwise will cause cabin drop accident!



Step 2:

Counter-clockwise loosen the nut (M10) about 90 degree (1/4 round).